

ABIGAIL'S SYSTEM OPERATION

DRIVER QUICK REFERENCE

01 SYSTEM LOADING

Ignition powers the system on and starts its configured self-check.



02 SYSTEM STANDBY

When no compliance view is triggered, the display remains in standby.



03 DOOR OPEN

The front compliance view displays while the entrance door is open.



04 DOOR CLOSED

The front view follows the configured timeout or vehicle-speed logic.



05 REVERSE ACTIVE

The rear compliance view displays automatically while the vehicle is in reverse.



OPERATION MAY VARY BY VEHICLE CONFIGURATION.
DO NOT DISABLE OR TAMPER WITH SAFETY EQUIPMENT.

OCLUM.COM | 856-488-6182


CELLULAR LIVE VIDEO

+ LIVE GPS

SEE IT. TRACK IT. RESOLVE IT.

LIVE VIEW + REMOTE VIDEO DOWNLOAD

Use cellular live view, remotely review and download recordings, track vehicle location and view stored route history on compatible systems.

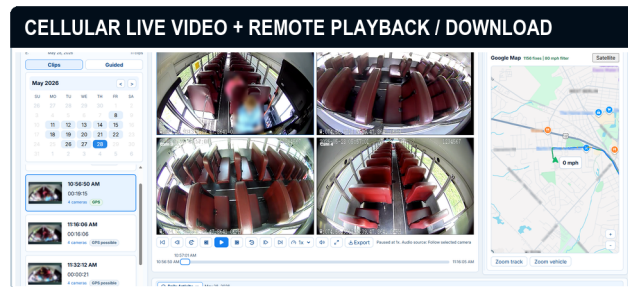

YOUR CURRENT OCLUM SYSTEM MAY BE ELIGIBLE FOR CELLULAR LIVE VIDEO + REMOTE DOWNLOAD.

Ask us to check recorder compatibility and cellular-service options.



LIVE VIEW



REMOTE PLAYBACK +
DOWNLOAD




LIVE GPS TRACKING



STORED ROUTE HISTORY

LIVE GPS + FLEET HISTORY

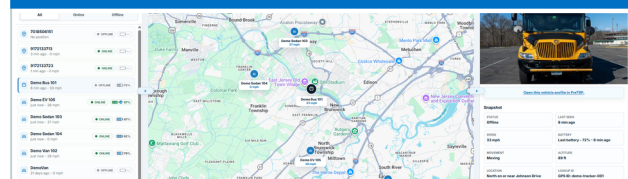

INSTALLED BY

DEALER / INSTALLER

PHONE

OCLUM.COM

856-488-6182

CELLULAR VIDEO + GPS OPTIONS